


```
1
                  Literature Parts
      LIT4389866 Use & Care Guide
      LIT4389354 Instructions Installation
      LIT4389357 Tech Sheet
2
                  Element, Surface (Includes Illus 3)
      4389587
                  6" Coil (2)
      4389588
                  8" Coil (2)
3
      4389586
                  Medallion (4)
                  Block, Terminal
4
      4389596
5
      4389597
                  Clip, Term Block
6
      4389652
                  Screw, Term Block
7
                  Bowl, Burner
      4389589
                  6" Black
      4389590
                  8" Black
                  6" Chrome
      4389591
                  8" Chrome
      4389592
8
                  Hinge, Maintop
      4389390
                  Left
      4389389
                  Right
9
      4389529
                  Screw, Mounting
10
      4389392
                  Bracket, Hinge (2)
      4389653
                  Screw, Hinge Brkt.
11
12
                  Filler, Backsplash
      4389917
                  Black
      4389872
                  White
13
      4389598
                  Rod, Top Support
14
      4389582
                  Cover, Wire
                  Extension, Side(2)
15
      4389364
                  Cover, Wire
16
      4389599
                  Screw, Utility
17
      4389646
18
                  Control, Element
      4389571
                  R.F. & L.R.
      4389572
                  L.F. & R.R.
19
      4389570
                  ERC
20
                  Plate, Clock
                  Black
      4389366
      4389367
                  White
21
      4389372
                  Bracket, Clock (2)
                  Screw, Bracket (4)
22
      4389650
                  Screw, Panel (8)
23
      4389647
24
      4389577
                  Light, Oven Ind.
25
      4389578
                  Lens, Ind. Light
                  Panel, Control
26
      4389568
                  Black
      4389569
                  White
27
      4389594
                  Insulation, Panel
                  Endcap
28
      4389411
                  L.H. Black
                  R.H. Black
      4389360
                  L.H. White
      4389361
                  R.H. White
      4389362
29
                  Knob, Control (4)
      4389573
                  Black
      4389574
                  White
30
                  Switch, Oven Lite
      4389369
                  Black
      4389370
                  White
```


31	4389649	Screw, Mtg. (8)
32	4389969	Bottom, Burner Box
33	4389595	Vent Tube Assy.
34	4389646	Screw, Mtg.
35	4389603	Switch
36	4389604	Switch
37	4389605	Switch
38	4389654	Screw (6)
39	4389650	Screw (4)
40		Grommet
	4389580	Тор
	4389581	Hose (2)

OVEN DOOR PARTS
For Model: R\$385PXEB1, R\$385PXEQ1
(Black) (Designer White)

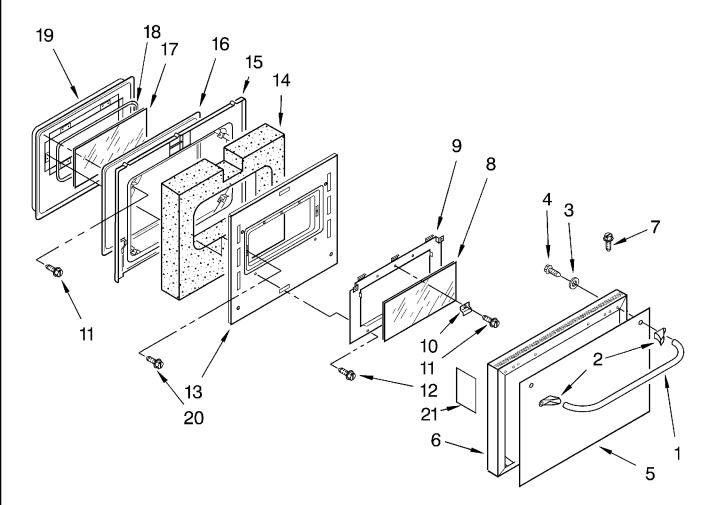


1		Handle, Oven Door
	4389412	Black
	4389413	White
2		Endcap, Handle
	4389521	Black
	4389522	White
3	4389418	Spacer, Handle (2)
4	4389657	Screw, Handle (2)
5		Glass, Outer Door
	4389576	Black
	4389575	White
6		Frame, Oven Door
	4389602	Black
	4389667	White
7		Screw, Frame (6)
	4389552	Black
	4389538	White
8	4389402	Glass, Middle
9	4389399	Plate, Glass Mtg.
10	4389398	Retainer, Glass
11	4389540	Screw, Retainer
12	4389534	Screw, Retainer
13	4389397	Retainer, Insul.
14	4389394	Insulation, Door
15	4389940	Lining, Door
16	4389600	Gasket, Oven Door
17	4389403	Glass, Inner
18	4389408	Seal, Inner Glass
19	4389928	Plug, Oven Door
20	4389529	Screw
21		Insulator, Door
	4389404	Black
	4389405	White

LOCK MOTOR PARTS For Model: R\$385PXEB1, R\$385PXEQ1 (Black) (Designer White)

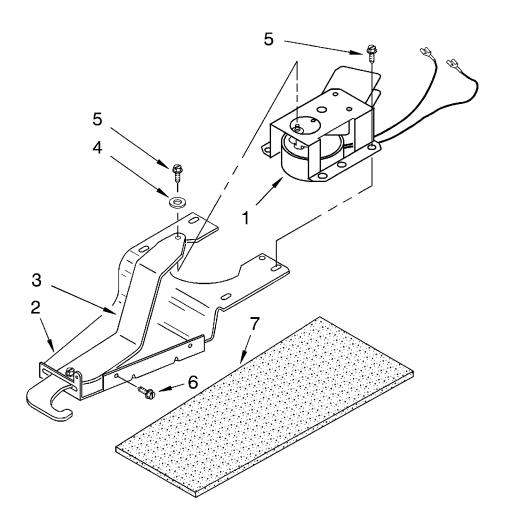

1	4389419	Motor, Lock
2	4389607	Plate, Door Lock
3	4389608	Lever, Lock
4	4389659	Washer
5	4389526	Screw (4)
6	4389535	Screw (5)
7	4389606	Insulation, Motor

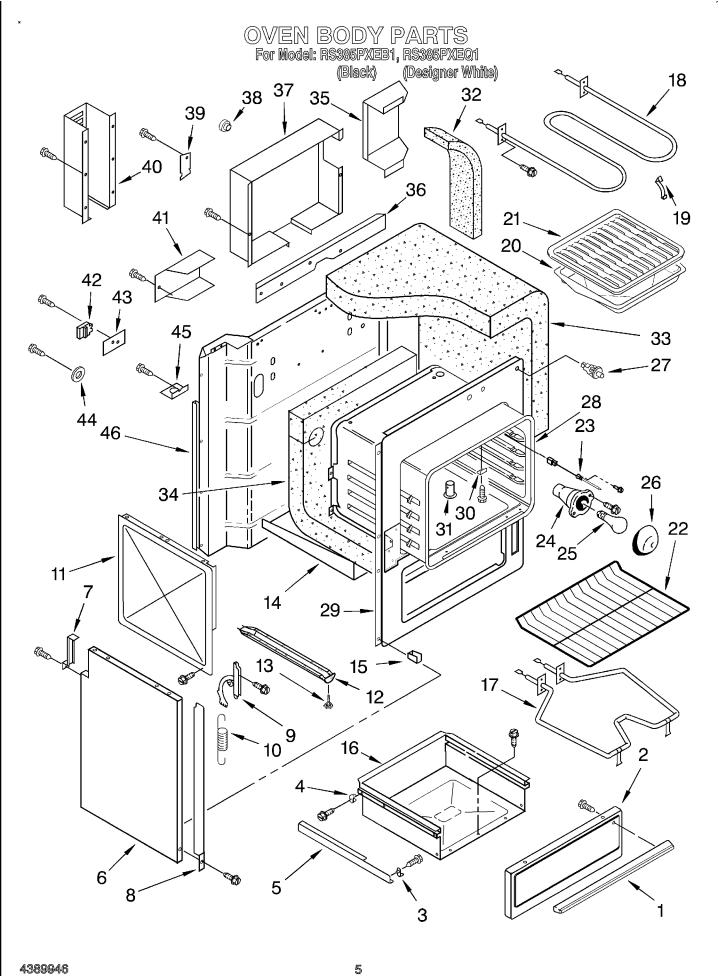


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

```
1
                   Handle, Drawer
      4389621
                  Black
      4389665
                  White
      4389648
                   Screw (2)
2
                  Panel, Drawer
      4389619
                  Black
      4389620
                  White
      4389540
                  Screw
3
      4389477
                  Stop, Glide (2)
      4389541
                   Screw (2)
4
      4389476
                   Stop, Glide (2)
                   Screw (2)
      4389537
5
      4389470
                   Support, Drawer (2)
                   Panel, Bodyside
      4389617
                  Left Side
      4389618
                  Right Side
7
      4389638
                  Filler, Rear (2)
      4389646
                  Screw
8
                  Trim, Side
      4389465
                  L.H. Black
                  R.H. Black
      4389466
      4389467
                  L.H. White
      4389468
                  R.H. White
9
                  Hinge, Oven Door
                  Left Hand
      4389473
                  Right Hand
      4389472
      4389538
                  Screw (6)
10
      4389474
                  Spring, Door (2)
11
      4389613
                  Retainer, Side (2)
      4389529
                  Screw
12
      4389632
                  Rail, Base (2) (Includes No. 13)
                  Leg, Leveler (4)
13
      4389478
                  Retainer, Lower
14
      4389614
                  Spacer, Body (4)
15
      4389558
16
      4389612
                  Drawer, Storage
      4389585
17
                  Element, Bake
18
      4389625
                  Element, Broil
      4389529
                   Screw
19
      4389639
                   Support,Broil (3)
                  Pan, Broiler
20
      4389921
21
      4389922
                  Grid, Broiler
22
      4389455
                  Rack, Oven (2)
23
      4389906
                  Sensor, Oven
      4389527
                  Screw (2)
24
      4389628
                  Housing, Lite
                  Screw (2)
      4389536
25
                  Bulb, Oven Lite
      4389460
26
      4389629
                  Lens, Oven Lite
27
      4389630
                   Switch, Door Lite
      4389967
                  Body, Oven
28
29
      4389968
                  Frame, Front
30
      4389475
                  Cover, Front
      4389535
                  Screw
31
      4389637
                  Tube, Vent
```

32	4389624	Insulation, Top & Side (2)
33	4389622	Insulation, Wrap
34	4389623	Insulation, Back & Bottom
35	4389442	Shield, Wire
36	4389631	Shield, Wire
37	4389615	Shield, Upper
	4389646	Screw
38	4389660	Bushing, Snap
39	4389634	Plate, Flue Cover
	4389646	Screw
40	4389616	Cover, Upper Wire
	4389529	Screw
41	4389635	Cover, Lite Wire
	4389529	Screw
42	4389627	Block, Terminal (Pigtail)
43	4389579	Shield, Disconnect
	4389651	Screw (2)
44	4389658	Washer, Ground
	4389540	Screw
45	4389633	Plate, Cord Mtg.
	4389529	Screw
46	4389611	Back, Main
ANTI-TIP KIT		
	4389471	Anti-Tip Kit

FAN PARTS For Model: RS385PXEB1, RS385PXEQ1 (Black) (Designer White)

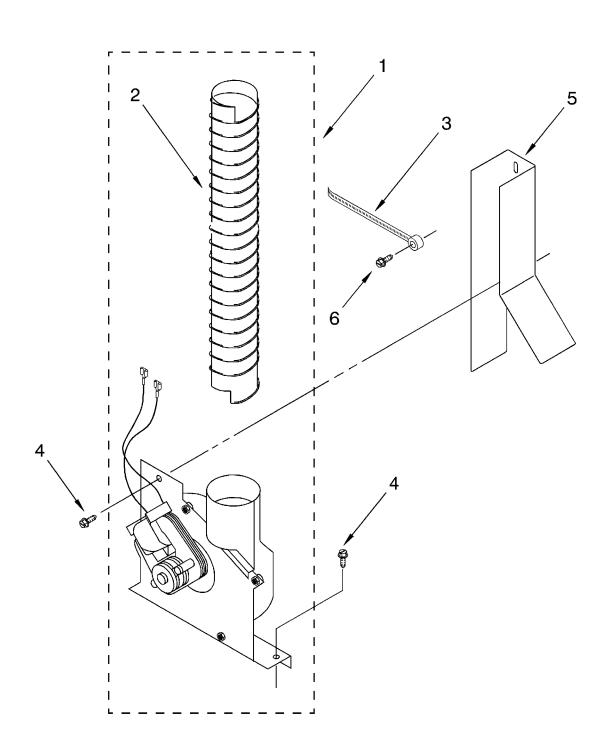

1	4389904	Blower Assy. (Includes Hose)
2	4389640	Hose, Flexible
3	4389636	Clamp, Hose
4	4389646	Screw
5	4389905	Raceway, Wire
6	4389528	Screw